 


- Notes:
1. All dimensions are in millimetres unless otherwise stated.
 2. The foundation size is indicative only and will depend upon ground conditions, groundwater level and wind loadings.
 3. Inserts and ducting to be supplied by turbine manufacturer.
 4. Earthing details are indicative, subject to turbine supplier approval.
 5. Suitable formation to be specified by turbine supplier.



Trecelyn Wind Farm
Environmental Statement

Figure 4.2
Typical wind turbine foundation

